

INSTALLATION INSTRUCTION

Alpine 3.5" Remodel Housing

A1RE-346M, A1RE-347M, A1RE-356M, A1RE-357M



SAFETY INSTRUCTION

IMPORTANT: NEVER attempt any work without shutting off the electricity.

- Read all instructions before installing.
- System is intended for installation by a qualified electrician in accordance with the National Electrical Code and local regulations.
- Go to the main fuse box, or circuit breaker. Place the main power switch in the "OFF" position and unscrew the fuse(s) or switch "OFF" the circuit breaker switch(es) that control the power to the fixture or room that you are working on.
- Place the wall switch in the "OFF" position.

AVERTISSEMENT

IMPORTANT : Coupez l'électricité avant TOUTE manipulation.

- Lisez toutes les instructions avant d'installer.
- Système est destiné à être installé par un électricien qualifié en conformité avec le code national de l'électricité et les règlements locaux.
- Accédez au panneau central de disjoncteurs ou de fusibles de votre demeure et placez l'interrupteur principal en position d'arrêt (« OFF »).
- Placez l'interrupteur mural en position d'arrêt (« OFF »).

CAUTION:


All parts must be used as indicated in these instructions. Do not substitute any parts, leave parts out, or use any parts that are worn out or broken. Failure to follow this instruction could invalidate the UL/cUL listing of this fixture.

OVERVIEW:


Housing is remodel Non-IC. Housing requires a trim for finished look. Refer to specification sheets for compatible trim options.

INSTALLATION REQUIREMENT

Ceiling Thickness	Minimum Required Plenum Height	
	Trim	Trimless
1/2"	4"	6"
1"	3 1/2"	5 1/2"

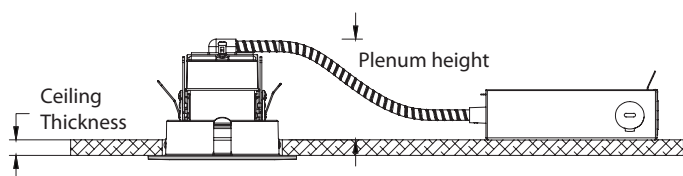

OVERALL HOUSING DIMENSION

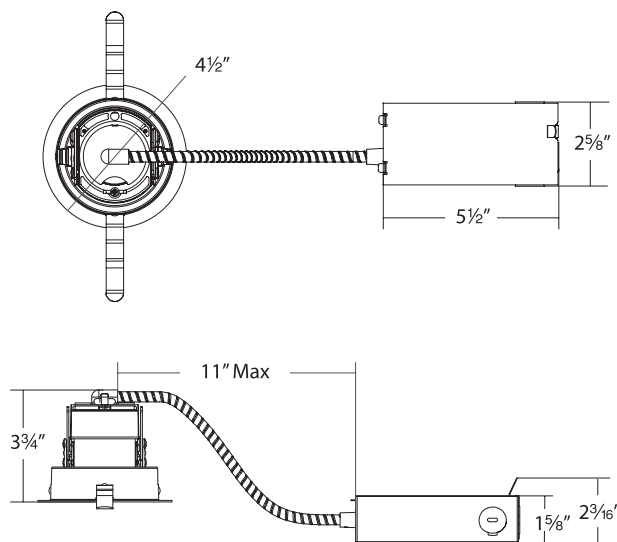

SPECIFICATIONS	
Input:	120-277V, 50/60HZ
Installation:	Non-IC A1RE-346M, A1RE-347M, A1RE-356M, A1RE-357M
Dimming:	TRIAC / ELV / 0 -10V

AISPIRE retains the right to modify the design of our products at any time as part of the company's continuous improvement program.

INSTALLATION INSTRUCTION

Alpine 3.5" Remodel Housing

A1RE-346M, A1RE-347M, A1RE-356M, A1RE-357M

AiSPIRE
A W A C C O M P A N Y

FIG. 1

Cut Out:
Round: $3\frac{13}{16}$ "
Square: $3\frac{13}{16}$ " x $3\frac{13}{16}$ "

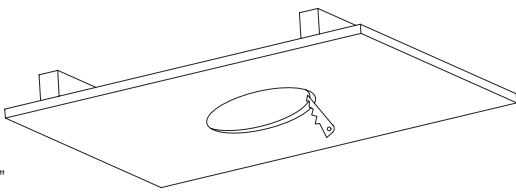


FIG. 2


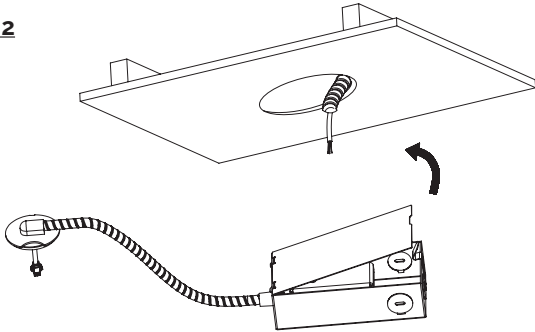


FIG. 3

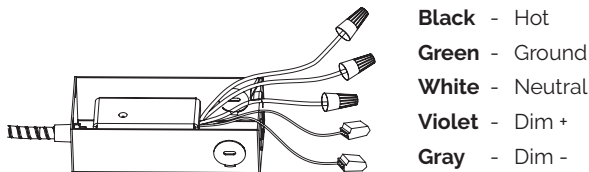

Black - Hot
Green - Ground
White - Neutral
Violet - Dim +
Gray - Dim -

FIG. 4


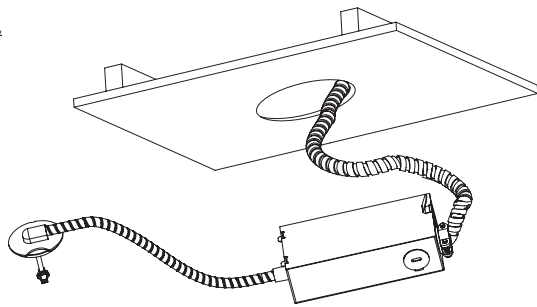


FIG. 5

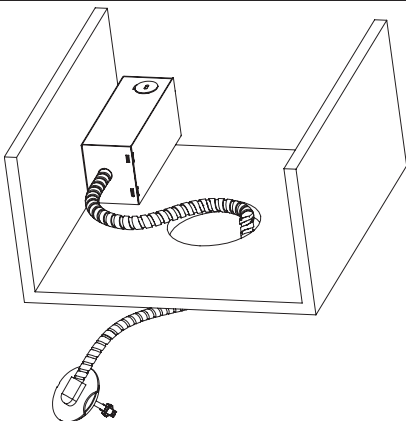

HOUSING INSTALLATION:

1. At the point of installation, cut a $3\frac{13}{16}$ " round hole for a round trim/trimless or a $3\frac{13}{16}$ " X $3\frac{13}{16}$ " square hole for a square trim/trimless. (See **FIG. 1**)
2. Pull building supply wires through ceiling cutout and open fixture junction box door (See **FIG. 2**). Remove desired housing knockout and feed building wires into housing using appropriate connector.
3. Connect fixture wires to building wires: insert each supply wire into appropriate junction box connector. This fixture features electronic low voltage (Traic/ELV) or 0-10V dimming capabilities. To utilize Traic/ELV, wire black (line hot), white (line neutral), and green (ground) in accordance to dimmer specifications.

To utilize 0-10V dimming, wire purple (dim+), gray (dim-), black (line hot), white (line neutral) and green (ground) in accordance to dimmer specifications.


When not using a dimmer, connect black fixture wire to hot, white fixture wire to neutral and green fixture wire to ground.

Leave all other wires capped individually (See **FIG. 3**).
4. Place all wiring and connectors back in junction box and replace the junction box's cover (See **FIG. 4**).
5. Guide junction box through the cut hole and secure appropriately using either internal mounting slots or external key hole (See **FIG. 5**).

AiSPIRE retains the right to modify the design of our products at any time as part of the company's continuous improvement program.

INSTALLATION INSTRUCTION
Alpine 3.5" Remodel Housing
A1RE-346M, A1RE-347M, A1RE-356M, A1RE-357M

FIG. 6

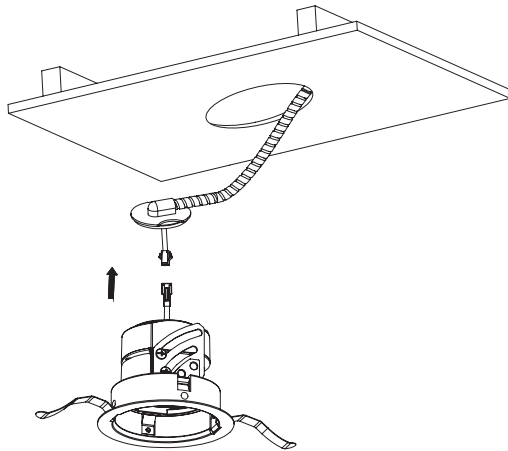

6. Raise the module to ceiling and connect power connector. Secure cap on top of heat sink by locking wing nut (See FIG. 6 & 7).

FIG. 7


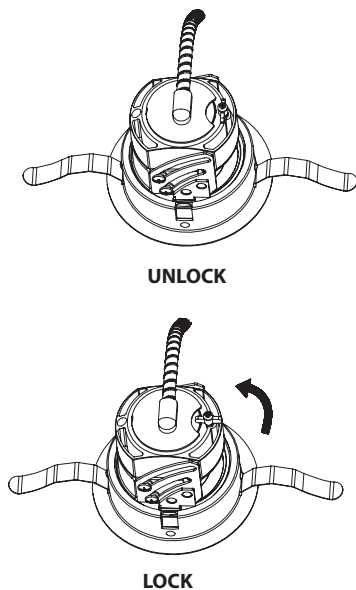


FIG. 8

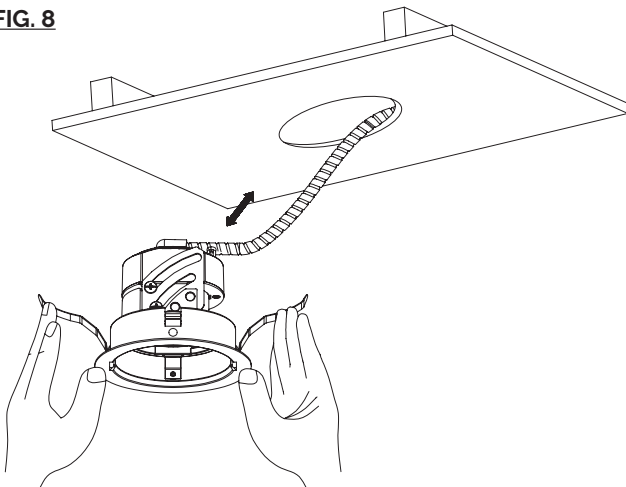

7. Fold trim assembly mounting springs inward and insert module assembly into ceiling cutout. Be sure once installed, trim assembly is flush and secure (See FIG. 8).

INSTALLATION INSTRUCTION
Alpine 3.5" Remodel Housing
A1RE-346M, A1RE-347M, A1RE-356M, A1RE-357M

AiSPIRE
A W A C C O M P A N Y

FIG. 9

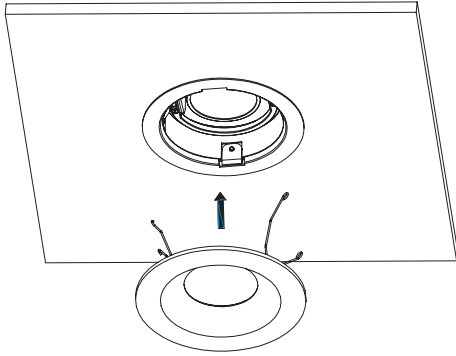


FIG. 10

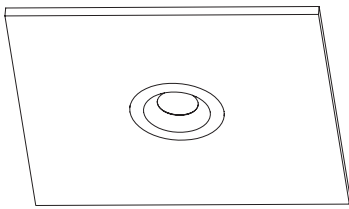


FIG. 11


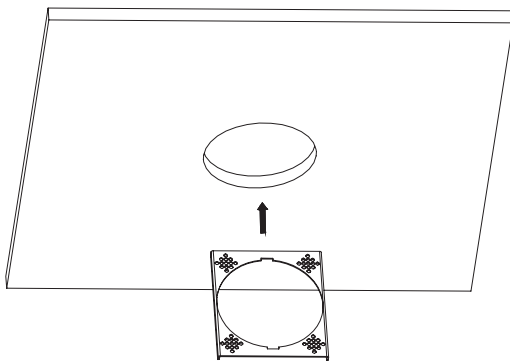


FIG. 12

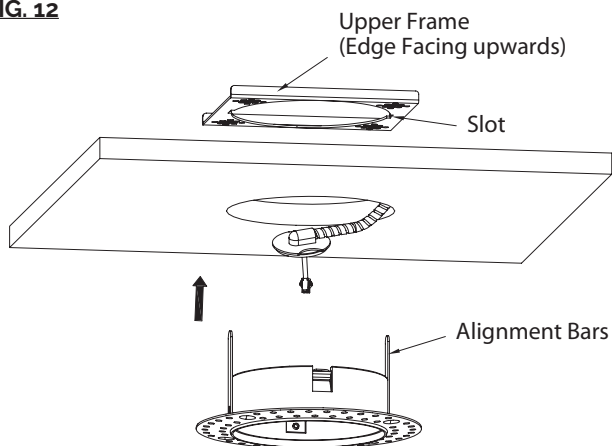

3. Refer to installation instructions for appropriate trim to complete the installation (See **FIG. 9 & 10**).

FOR TRIMLESS INSTALLATION

1. Insert upper frame through ceiling opening. Angling maybe required. (See **FIG. 11**)
2. Raise invisible trim frame to ceiling cut out and insert alignment bars into upper frame alignment slots. (See **FIG. 12**)

AiSPIRE retains the right to modify the design of our products at any time as part of the company's continuous improvement program.

INSTALLATION INSTRUCTION

Alpine 3.5" Remodel Housing

A1RE-346M, A1RE-347M, A1RE-356M, A1RE-357M

AiSPIRE

A W A C C O M P A N Y

FIG. 13

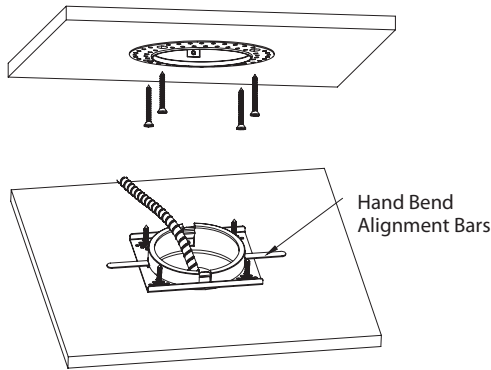


FIG. 14

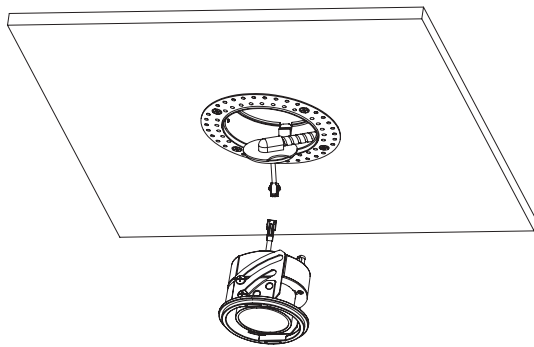


FIG. 15


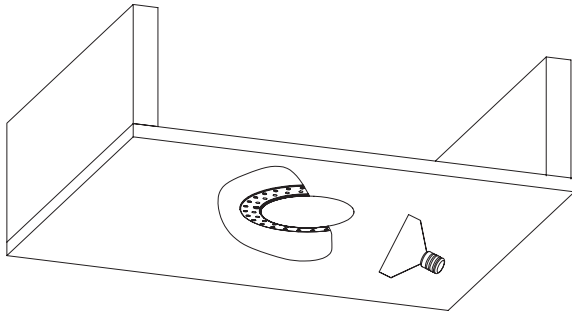


FIG. 16

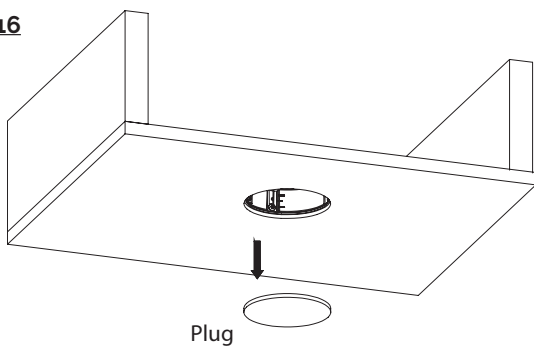

3. With upper frame and trimless frame flush with both ceiling surfaces, hand bend the alignment bars parallel to ceiling (See **FIG. 13**).

4. Raise the module to ceiling and connect power connector. Secure cap on top of heat sink by locking wing nut (See **FIG. 14**).

FOR TRIMLESS INSTALLATION (CON'T)

5. Insert plaster shield inside trim opening. Apply plaster or spackle over trimless frame and sand surface dry for finished look. (See **FIG. 15**)

6. Remove the plaster shield when finishing is complete. (See **FIG. 16**)

7. Refer to installation instructions for appropriate trim to complete the installation.

AiSPIRE retains the right to modify the design of our products at any time as part of the company's continuous improvement program.